



FX3U-88MR 接线图

注: 模拟量选配
 0-10V
 4-20mA
 3950-10K NTC

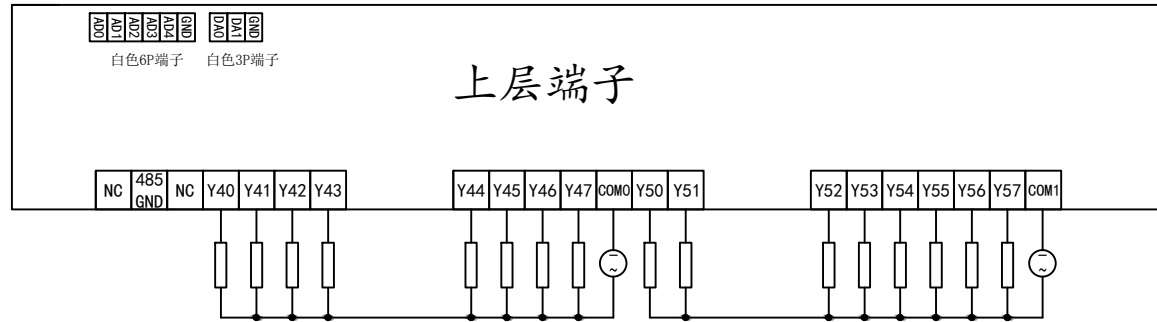

输入COM端子必须接0V

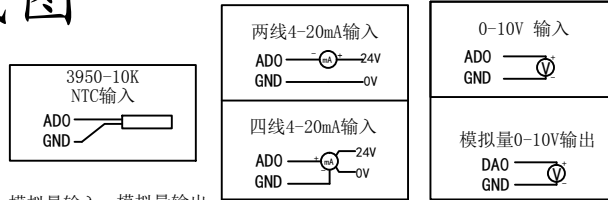